


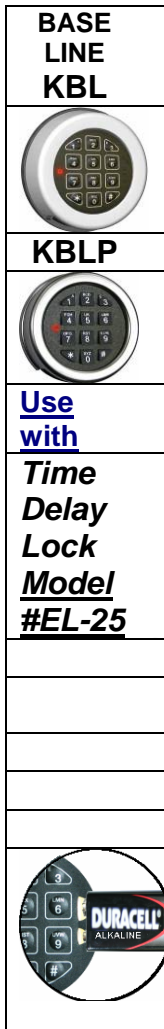

KEY PAD



USER INSTRUCTIONS FOR TDL LOCK #EL-25




OPEN - ÖFFNEN - OUVERTURE - APERTURA




ADD SECOND USER - ZWEITEN BENUTZER ZUFÜGEN
AJOUTER DEUXIÈME UTILISATEUR - AGGIUNGA IL SECONDO UTENTE
AGREGUE A SEGUNDO USUARIO

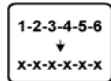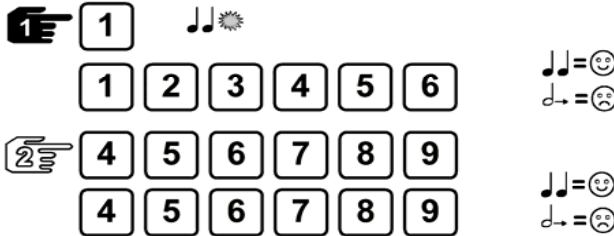

CHANGE CODE - CODE ÄNDERN - CODE MODIFICATION
CODIFICHI CAMBIARE - CIFRE CAMBIAR

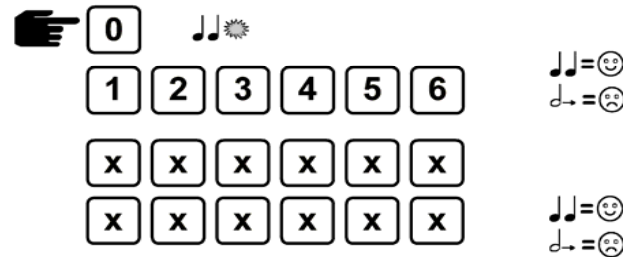

DELETE SECOND USER - ZWEITEN BENUTZER LÖSCHEN
SUPPRIMER DEUXIEME UTILISATEUR - CANCELLI IL SECONDO UTENTE
SUPRIMA A SEGUNDO USUARIO

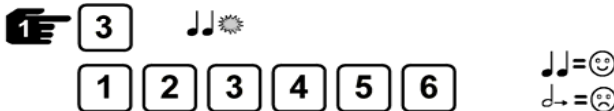

press and hold until double signal and light stays ON
gedrückt halten bis doppel-signal und leuchte AN
subsistance serrée
conservazione premuta
subsistencia presionada



GENERAL

The lock operates with a numeric six-digit code or a word with 6 letters. A secondary code can be added. Each key press is confirmed with an audio and light signal. After entry of a valid code a double beep follows. An invalid entry is followed by a long signal. After 10 seconds without entry, an already started code entry is cancelled.

Open: (see fig. A)

Enter code (factory code = 1-2-3-4-5-6), unlock door and open. If not opened within 3 seconds, the lock secures automatically. If code entry failed on first attempt wait 20 seconds before re-entering. Three long beeps indicate the lock bolt is jammed. Release the handle and re-enter code.

Locking:

Close door and turn handle fully to closing position. The lock is secured. Confirm locking status by trying to turn handle back.

Manipulation protection:

Entry of four consecutive invalid codes – keypad is locked for 5 minutes. During this period, the light flashes every 10 seconds and any key press causes a long signal. After expiration, entry of two more invalid codes, restarts the 5 minute locking period.

Safety reference:

All codes are to be securely stored. Do not use personal data (i.e. Birthdays, telephone numbers etc.) as the code. Change the factory code before you start using the safe!

Activate the second opening code: (see fig. B)

Press and hold Key [1] until double signal. The light remains on during the following actions.

- Enter main code.
- Enter Secondary code twice (Double signal after each)

(The main code cannot be deleted.)

Change code: (with safe door open, see fig. C)

Press and hold Key [0] until double signal. The light remains on during the following actions.

- Enter old code (double signal)
- Enter new code (double signal) and repeat new code (double signal)

Delete the secondary code: (see fig. D)

In case of entry errors (long signal), the old code remains valid.

Press and hold Key [3] until double signal.. The light remains on during the following action.

- Enter main code.
- The secondary code is deleted.

Current supply / battery change:

A series of signals indicates that the battery is weak and must be replaced.

Use only 9V ALKALINE - batteries! The battery compartment is located at the bottom of the entry unit.

PROGRAMMING TIME DELAY (TDL):

Press and hold Key [9] until double signal.. The light remains on during the following action.

Enter main code.

- Enter DELAY TIME, (01 = 1 minute, 15= fifteen minutes, etc.). Enter OPEN WINDOW, (01 = 1 minute, 15= fifteen minutes, etc.). (Double signal after each) MAX 99 minutes.

When operating DELAY and OPEN activity is indicated by BEEPS and LED blinking.

Removing or changing values in TDL can only be done in the OPEN Window period!

Press and hold Key [9] until double signal.. The light remains on during the following action.

Enter main code.

Enter new DELAY & OPEN values OR to remove all delay enter six zeros, (000000).